


J.J. Wohlfert's Crown Installation Tutorial

Simple and Proven Ways to Miter & Install Crown Mouldings Accurately

Choosing a Style



Choosing a Size

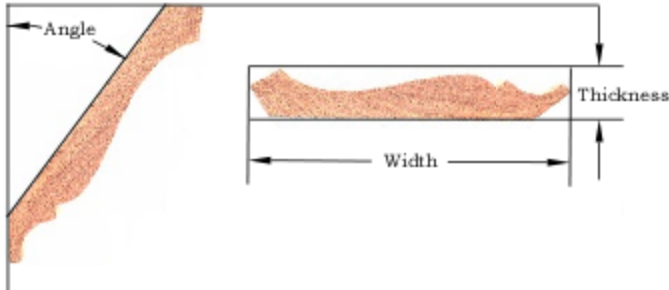

Measuring

Measure of Wall = Length of Bottom of Crown
Allow Extra for Miters on each end

Cut

- A. Upside Down
- B. Constant Angle
- C. Simple 45° Miter Cuts

(For 90° Corners Only. Use Angle Finder for all others.)



Inside Corner:
Correct pieces Should look like this.

Outside Corner:
Correct pieces Should look like Image "C".

Finishing

Interior?: Paint or Stain Normally

Exterior?: Protect Wood Used Outside

Before priming and painting be sure that your wood is dry (well under 20% humidity). Then use a water-repellent preservative (WRP) and let dry and cure for a couple days before applying paint. Use an acrylic latex paint. Apply both WRP and paint liberally on all end-grain, joints, and drilled areas. This process along with normal maintenance will ensure the longest life for your wood in exterior applications.¹

¹ Recommendations by Forest Products Research Society 'Weathering Performance of Finished Yellow Poplar Siding' by William C. Feist, Forest Products Journal, Vol. 37, No.3, 1987


Install

Drill, Glue & Nail according to General Practice.

www.JJWohlferts.com (989) 593-3283


Simple Principles to Great Crown

A.

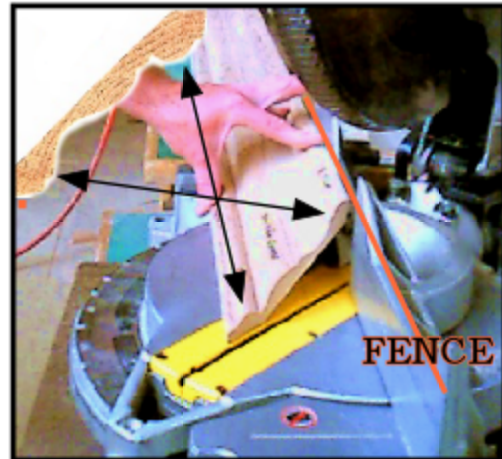


Place the **Bottom on the Fence**
Mark Measurements on the Bottom

B.

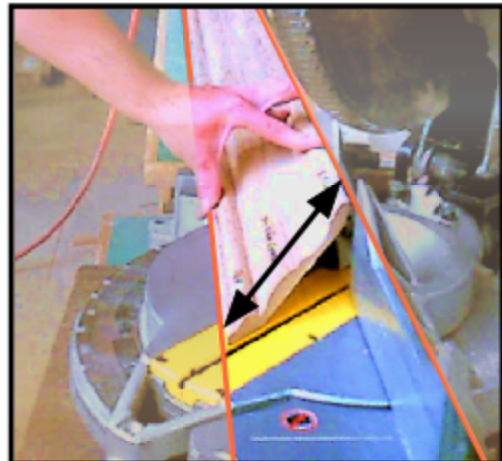

Mark a line on the Fence and Table
Use this Line to **Keep the Same Angle**

C.

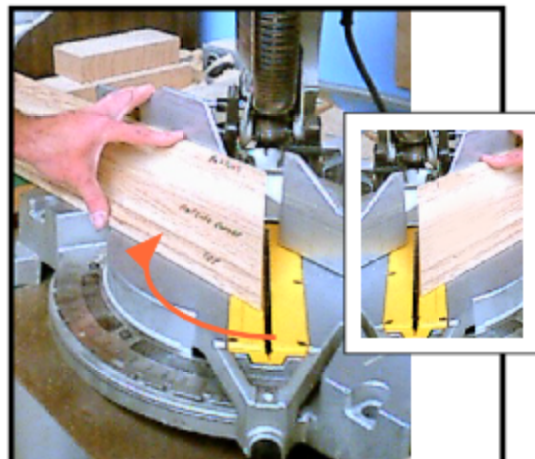

Cut 1 Side then Reverse the Cut for the 2nd side. (Outside Corner Shown)